


MACHEREY-NAGEL

User manual

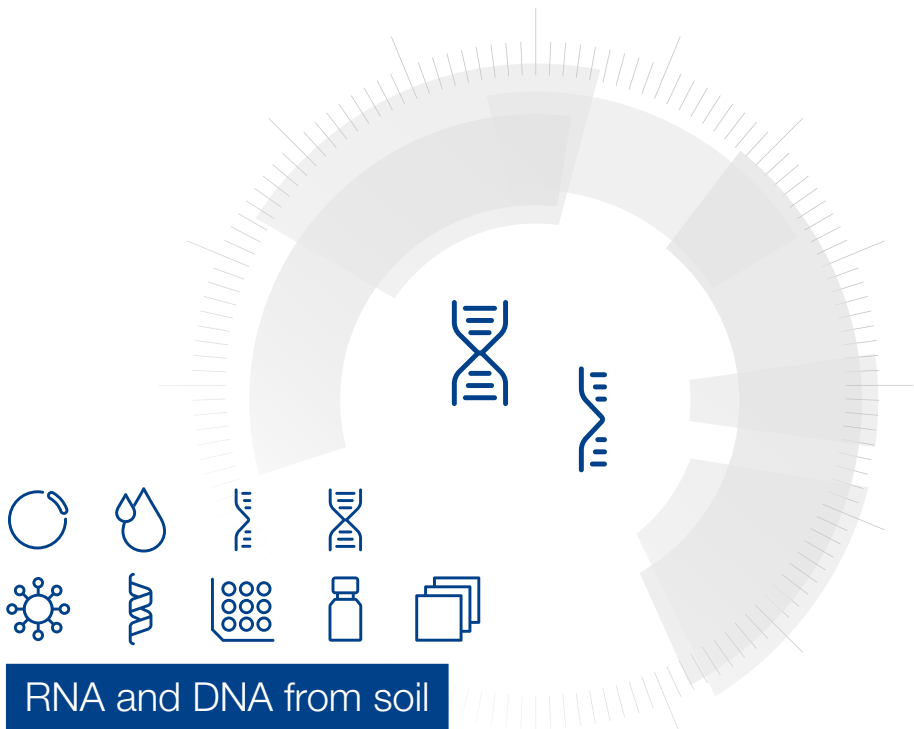














- NucleoBond® RNA Soil
- DNA Set for NucleoBond® RNA Soil

September 2023 / Rev. 02

RNA and DNA from Soil

Protocol at a glance (Rev. 02)





NucleoBond® RNA Soil

1 Prepare sample		Fill tubes up to the 1 mL graduation mark
2 Add lysis buffers		800 μ L Buffer E1 <i>Optional: 100 μL OPT</i> 100 μ L Phenol:Chloroform:Isoamylalcohol Vortex 2 s
3 Bead beating		Vortex horizontally 5 min at RT
4 Lysate clearing	 	13,000 \times g, 2 min Transfer the supernatants to a 15 mL tube
5 Adjust binding conditions	 	125 μ L Buffer E2 per mL supernatant Vortex 5 s 2 min RT 4,500 \times g, 2 min
6 Column setup and equilibration		12 mL Buffer EQU
7 Load column		Load supernatant on NucleoBond® RNA Column
8 Filter flush	 	6 mL Buffer E3 Discard Filter
9 Column wash		8 mL Buffer E4
10 RNA elution		5 mL Buffer ERNA
Optional: DNA elution <i>DNA Elution Set required</i>		Transfer column to a 50 mL tube 5 mL Buffer EDNA

RNA and DNA from Soil

Protocol at a glance (Rev. 02)

NucleoBond® RNA Soil

11 Precipitate nucleic acids		3.5 mL Isopropanol Vortex 5 s Transfer mixture on column
12 Bind nucleic acids		4,500 × g 2 min
13 Washing and drying		1 mL Buffer E5 4,500 × g, 2 min
14 Elute nucleic acids		100 µL RNase-free H ₂ O 4,500 × g, 2 min

Contact MN

Germany and international

MACHEREY-NAGEL GmbH & Co. KG
Valenciener Str. 11 · 52355 Düren · Germany
Tel.: +49 24 21 969-0
Toll-free: 0800 26 16 000 (Germany only)
E-mail: info@mn-net.com

Technical Support Bioanalysis

Tel.: +49 24 21 969-333
E-mail: support@mn-net.com

USA

MACHEREY-NAGEL Inc.
924 Marcon Blvd. · Suite 102 · Allentown PA, 18109 · USA
Toll-free: 888 321 6224 (MACH)
E-mail: sales-us@mn-net.com

France

MACHEREY-NAGEL SAS
1, rue Gutenberg – BP135 · 67720 Hoerdt Cedex · France
Tel.: +33 388 68 22 68
E-mail: sales-fr@mn-net.com

MACHEREY-NAGEL SAS (Société par Actions Simplifiée) au capital de 186600 €
Siret 379 859 531 00020 · RCS Strasbourg B379859531 · N° intracommunautaire FR04 379 859 531

Switzerland

MACHEREY-NAGEL AG
Hirsackerstr. 7 · 4702 Oensingen · Switzerland
Tel.: +41 62 388 55 00
E-mail: sales-ch@mn-net.com

Table of contents

1	Components	4
1.1	Kit contents	4
1.2	Reagents, consumables and equipment to be supplied by user	5
1.3	About this user Manual	5
2	Product description	6
2.1	Basic principle	6
2.2	Kit specifications	7
2.3	Bead tubes and lysis	7
3	Storage conditions and preparation of working solutions	8
4	Safety instructions	9
4.1	Disposal	9
5	Protocol	10
6	Appendix	14
6.1	Troubleshooting	14
6.2	Ordering information	16
6.3	Product use restriction / warranty	17

1 Components

1.1 Kit contents

REF	NucleoBond® RNA Soil	DNA Set for NucleoBond® RNA Soil
	20 preps 740140.20	20 preps 740141.20
Lysis Buffer E1	70 mL	-
Buffer OPT	10 mL	-
Equilibration Buffer EQU	250 mL	-
Binding Buffer E2	10 mL	-
Wash Buffer E3	125 mL	-
Wash Buffer E4	180 mL	-
RNA Elution Buffer ERNA	125 mL	-
DNA Elution Buffer EDNA	-	125 mL
Wash Buffer E5 (Concentrate)*	6 mL	6 mL
RNase-free H ₂ O	13 mL	13 mL
NucleoSpin® Bead Tubes Type A	80	-
NucleoBond® RNA Columns	20	-
Plastic Washer	20	-
NucleoSpin® Finisher Columns	20	20
User manual	1	-

* For preparation of working solutions and storage conditions see section 3.

1.2 Reagents, consumables and equipment to be supplied by user

Reagents

- Phenol:Chloroform:Isoamylalcohol (25:24:1 v/v), e.g., VWR Cat. No. 0883–100ML
- 96–100 % ethanol
- Isopropanol

Consumables

- 15 mL centrifuge tubes
- 50 mL centrifuge tubes
- RNase free pipette tips

Equipment

- Manual pipettors
- Centrifuge for microcentrifuge tubes
- Centrifuge for 15 mL and 50 mL tubes, capable of reaching 4,500 x *g*
- Equipment for sample disruption and homogenization (see section 2.3)
- Personal protection equipment (e. g., labcoat, gloves, goggles)

1.3 About this user Manual

It is recommended to read the instructions of this user manual carefully before use. All technical literature is also available on the Internet at www.mn-net.com.

Please contact Technical Service regarding information about changes of the current user manual compared to previous or updated revisions.

2 Product description

2.1 Basic principle

The **NucleoBond® RNA Soil Kit** is designed for the purification of RNA from soil and sediment samples. In combination with the **DNA Set for NucleoBond® RNA Soil**, RNA and DNA can be isolated from the same soil sample. Thus, purified nucleic acids are suitable e.g., for metagenomic studies, where the genome and transcriptome are analyzed from the same sample.

Most soils contain relatively low amounts of RNA, compared to DNA. Therefore the sample input needs to be increased in order to gain acceptable RNA yields. The standard protocol of this kit uses four NucleoSpin® Bead Tubes Type A that can be filled with 250–500 mg of one soil sample each, resulting in a total sample amount of 1–2 g. This sample input amount will usually result in a RNA yield in the range from 1–10 µg. If working with four bead tubes per sample is too cumbersome, the content of four bead tubes can be combined into one 15 mL tube. This tube can be filled with 1–2 g of soil sample and four times the volume of Buffer E1, PCI and, if applicable, Buffer OPT. On the other hand, if a specific soil contains high amounts of RNA, the number of NucleoSpin® Bead Tubes Type A can also be reduced.

Organisms in a soil sample are lysed by bead beating in the presence of Lysis Buffer E1 (check for precipitated SDS!) and Phenol:Chloroform:Isoamylalcohol. Buffer OPT reduces the adsorption of nucleic acids to clay and mineralic soil components, but will also increase the contamination with humic acids if present. Performance cannot be predicted and depends on the soil composition, but as a rule of thumb a sample with a high content of organic and **humic components**, e.g., forest soil, should be lysed **without Buffer OPT** while predominantly **mineralic soils**, e.g., river sediments and clay, should be lysed **with Buffer OPT**.

Unlysed components are sedimented by centrifugation. The supernatants of the four bead tubes are transferred and combined into one fresh 15 mL tube and mixed with Binding Buffer E2. The incubation and centrifugation steps that follow can be used to prepare the **NucleoBond® RNA Columns**. The columns including filters are fixed with the supplied Plastic Washers on top of a 50 mL tube or laboratory flask or any NucleoBond® Rack. Filters and columns are equilibrated by Buffer EQU to pre-wet the filters and to prepare the anion exchange chromatography columns.

Once the columns are equilibrated, the clear supernatant of the centrifuged samples is loaded onto the filters in the purification columns. Undissolved particles and some of the soluble macro molecules will be held back by the filters.

Wash Buffer E3 is used to flush the filter columns and to wash the nucleic acids from the filters onto the column matrix. Nucleic acids and soluble polyanionic molecules including some fraction of humic substances (if present) will bind to the anion exchange surface. A brown layer might be visible on top of the silica matrix. After the washing step the filter is removed and the anion exchange column is washed with Buffer E4 which removes contaminants.

RNA is eluted by Buffer ERNA. If isolation of RNA and DNA is desired, DNA is eluted by Buffer EDNA, contained in the DNA Elution Set (to be ordered separately, see section 6.2), from the same column.

Isopropanol is added to the eluates and the mixture is bound to NucleoSpin® Finisher Columns by centrifugation. The columns are washed with Buffer E5, dried and eluted in RNase-free H₂O.

Eluted RNA and DNA fractions might contain a fraction of the other nucleic acid. If necessary, digest DNA or RNA enzymatically. Contact MACHEREY-NAGEL (tech-bio@mn-net.com) for RNase A and DNase Buffer Sets and protocols if required.

2.2 Kit specifications

The **NucleoBond® RNA Soil** and **DNA Set for NucleoBond® RNA Soil** kits are designed for the isolation of pure RNA and DNA from soil.

Kit specifications at a glance

Parameter	DNA Set for	
	NucleoBond® RNA Soil	NucleoBond® RNA Soil
Format	Anion exchange chromatography and silica spin purification	Elution Set (NucleoBond® RNA Soil kit required)
Processing	Manual	Manual
Sample material	1–2 g soil	NucleoBond® RNA Soil kit required
Elution volume	100 µL	100 µL
Preparation time	60 min/12 preps	15 min/ 12 preps
Typical yield	1–10 µg	5–50 µg
Use	For research use only	For research use only

2.3 Bead tubes and lysis

Reasonable RNA yields in the lower microgram range can be purified from 1–2 g of soil sample. The supplied NucleoSpin® Bead Tubes Type A work best with a sample input of 250–500 mg for each tube, depending on the soil density and water content. Remove excess water by centrifugation if working with wet samples. For optimal lysis efficiency and to prevent overloading of the bead tubes it is recommended to fill the tubes with sample material up to the 1 mL mark, resulting in 250–500 mg sample weight. Thus an optimal ratio of beads:sample:lysis buffer is achieved. To gain the desired total amount of 1–2 g of sample material, four bead tubes are needed.

If using four bead tubes for one sample is inconvenient, e.g., due to bead beating capacities, or to prevent sample mix-up, the content of four NucleoSpin® Bead Tubes Type A can be filled into one 15 mL tube (not supplied). Consecutively, 1–2 g of soil sample can be filled into the 15 mL bead tubes and lysed with four times the volume of the lysis buffers. This procedure might be more suitable for larger sample amounts but it needs to be ensured that the 15 mL tubes close tightly!

Bead beating can be performed with any dedicated machine (e.g., FastPrep® Instrument - MP Biomedicals, Precellys – Bertin Corp., Retsch Mill or the like) which can accommodate 2 mL tubes or 15 mL tubes respectively. Alternatively the MN Bead Tube Holder can be used in combination with a Vortex-Genie 2 (Scientific Industries) for 2 mL tubes. Please see section 6.2 for MN Bead Tube Holder ordering information.

Bead beating for 5 minutes at full speed is sufficient to lyse the cells when using a Vortexer. Parameters for other beat beating machines need to be established individually (e.g., 5 m/s for 30 s on a FastPrep® Instrument). Feedback for working parameters with other machines is highly appreciated!

Extended lysis times may result in increased contamination of RNA eluates with sheared genomic DNA and should be avoided.

3 Storage conditions and preparation of working solutions

Attention: Buffer E4 contains guanidine thiocyanate! Wear gloves and goggles!

CAUTION: Buffer E4 contains guanidine thiocyanate which can form highly reactive compounds when combined with bleach (sodium hypochloride). DO NOT add bleach or acidic solutions directly to the sample preparation waste.

Attention: Phenol:Chloroform:Isoamylalcohol is poisonous! Read the safety data sheet, supplied with the Phenol:Chloroform:Isoamylalcohol, and follow the instructions for use and disposal carefully! Take appropriate safety measures when working with Phenol:Chloroform:Isoamylalcohol and discard waste according to legal guidelines!

- All kit components can be stored at room temperature (18–25 °C) and are stable for at least one year.
- **Sodium dodecyl sulfate (SDS) in Buffer E1 may precipitate if stored at temperatures below 20 °C.** If a precipitate is observed in Buffer E1, incubate bottle at 30–40 °C for several minutes and mix well.

Before starting the **NucleoBond® RNA Soil** protocol prepare the following:

- Add 24 mL of 96–100 % ethanol to **Wash Buffer E5**.

4 Safety instructions

When working with the **NucleoBond® RNA Soil** or the **DNA Set for NucleoBond® RNA Soil** kits wear suitable protective clothing (e.g., lab coat, disposable gloves, and protective goggles). For more information consult the appropriate Material Safety Data Sheets (MSDS available online at www.mn-net.com/msds).



Caution: Guanidine hydrochloride in Buffer RB2, and guanidinium thiocyanate in Buffer DL can form highly reactive compounds when combined with bleach! Thus, do not add bleach or acidic solutions directly to the sample preparation waste.

The waste generated with the **NucleoBond® RNA Soil** or the **DNA Set for NucleoBond® RNA Soil** kit has not been tested for residual infectious material. A contamination of the liquid waste with residual infectious material is highly unlikely due to strong denaturing lysis buffer and Proteinase K treatment but it cannot be excluded completely. Therefore, liquid waste must be considered infectious and should be handled and discarded according local safety regulations.

4.1 Disposal

Dispose hazardous, infectious or biologically contaminated materials in a safe and acceptable manner and in accordance with all local and regulatory requirements.

5 Protocol

Before starting the preparation:


- Check Lysis Buffer E1 for precipitated SDS according to section 3
- Check if Wash Buffer E5 was prepared according to section 3
- Check if Phenol:Chloroform:Isoamylalcohol (25:24:1 v/v) is available
- Equilibrate Phenol:Chloroform:Isoamylalcohol to room temperature and mix well!
- Check if isopropanol is available
- Check if 15 mL and 50 mL tubes are available



1 Prepare Sample

Fill **4 NucleoSpin® Bead Tubes Type A** with sample material up to the **1 mL graduation mark** each.

If the beads of 4 NucleoSpin® Bead Tubes Type A have been pooled into one 15 mL tube according to section 2.3, add up to 2 g of soil sample. For best results, a total sample mass of 1000–1500 mg is recommended.

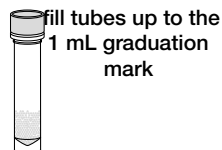

2 Add lysis buffers

Add **800 µL Lysis Buffer E1** to each NucleoSpin® Bead Tube Type A.

Optional: Add 100 µL Buffer OPT to each NucleoSpin® Bead Tube Type A.

Buffer OPT is recommended for soil with a predominantly mineralic matrix (e.g., clay, sediment) but negative for predominantly organic soil. It cannot be identified in advance, if addition of Buffer OPT increases yield or decreases purity.

Add **100 µL Phenol:Chloroform:Isoamylalcohol** (25:24:1 v/v) to each Bead Tube Type A.

Mix Phenol:Chloroform:Isoamylalcohol well before use! Take appropriate safety measures for working with Phenol:Chloroform:Isoamylalcohol!

If working with one 15 mL tube instead of four NucleoSpin® Bead Tubes Type A, add 3.2 mL Buffer E1, 0.4 mL Phenol:Chloroform:Isoamylalcohol and, if necessary, 0.4 mL Buffer OPT.

Vortex bead tubes for 2 s to distribute beads, sample and buffers homogeneously.



**+ 800 µL
Buffer E1**

**optional:
+ 100 µL Buffer
OPT**

**+ 100 µL
Phenol:Chloro-
form:Isoamyl-
alcohol**

Vortex 2 s

3 Bead Beating

Lyse cells by **bead beating** for **5 min** at **maximum speed**.

See section 2.3 for details. Dedicated machines might require shorter lysis times (e.g., 5 m/s for 30 s) and could increase carry-over of sheared genomic DNA into the RNA eluates if activated for too long.

Recommended: Use the MN Bead Tube Holder in combination with a Vortex-Genie 2



Vortex
RT, 5 min

4 Lysate clearing


Centrifuge samples for **2 min** at **full speed**.

Transfer and pool the supernatants of the **4 corresponding bead tubes** with one soil sample into a fresh 15 mL tube (not supplied) and determine the approximate volume.

Avoid transferring debris or the organic phase which is a thin layer between the aqueous phase and the solid debris and usually much darker than the aqueous supernatant!



13,000 x g
2 min



Transfer the supernatants to a 15 mL tube

5 Adjust binding conditions

For each mL of supernatant, add **125 µL Buffer E2**.

Example:

to 2.0 mL supernatant add 250 µL Buffer E2


to 2.5 mL supernatant add 313 µL Buffer E2

to 3.0 mL supernatant add 375 µL Buffer E2

Vortex for **5 s**.

Incubate for **2 minutes** at **room temperature** and **centrifuge** for **2 min** at **full speed** afterwards.

Proceed to column setup and equilibration during the incubation and centrifugation time.



+ 125 µL E2
per mL
supernatant



Vortex 5 s
2 min RT

4,500 x g
2 min

6 Column setup and equilibration


For each soil sample, combine a **NucleoBond® RNA Column** (including a filter) with a **Plastic Washer** and arrange the combination on a 50 mL tube or laboratory flask (not supplied).

Equilibrate filters and columns with **12 mL Buffer EQU**.

Add Buffer EQU on the upper rim of the filters.

All steps involving the NucleoBond® RNA Column are performed with gravity flow. Do not use vacuum!

Discard flow through.




7 Load column

Load supernatant from centrifugation (step 5) into the **center of the filter**.

Do not load sample on the rim of the filter column as this will decrease yield

Attention: Flow through contains remaining PCI!

Discard flow through according to legal guidelines.




8 Filter flush

Wash filter with **6 mL Buffer E3**.

Wash the rim of the filter.

Discard flow through.


Discard filter.

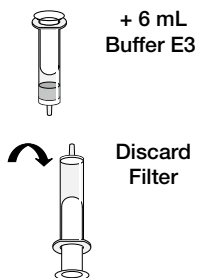

9 Column wash

Wash the NucleoBond® RNA Column without filter with **8 mL Buffer E4**.


Discard flow through.



10 RNA elution

Transfer the column to a fresh 50 mL tube (not supplied).

Elute RNA with **5 mL Buffer ERNA**.



**+ 5 mL
Buffer ERNA**

***Optional:* DNA elution (DNA Elution Set required)**

Transfer the column to a fresh 50 mL tube (not supplied).

Elute DNA with **5 mL Buffer EDNA**.

11 Precipitate nucleic acids

Add **3.5 mL isopropanol** (not supplied) to each eluate.

Vortex 5 s

Transfer mixture into a NucleoSpin® Finisher Column in a 50 mL centrifuge tube.



**+ 3.5 mL
Isopropanol**

12 Bind nucleic acids

Centrifuge NucleoSpin® Finisher Column for **2 min** at **4,500 x g**

If the mixture has not passed the silica completely, repeat centrifugation.

Discard flow through.



**4,500 x g
2 min**

13 Washing and drying

Add **1 mL Buffer E5** to the center of the silica.

Centrifuge for **2 min** at **4,500 x g**

Make sure the outlet of the NucleoSpin® Finisher Columns does not come in contact with the flow through.

Transfer NucleoSpin® Finisher Column to a fresh 50 mL centrifuge tube (not supplied).



**+1 mL
Buffer E5**
**4,500 x g
2 min**

14 Elute nucleic acids

Add **100 µL RNase-free H₂O** to the center of the silica.

Centrifuge for **2 min** at **4,500 x g**



**+ 100 µL
RNase-free H₂O**
**4,500 x g
2 min**

6 Appendix

6.1 Troubleshooting

Problem	Possible cause and suggestions
No or low nucleic acid yield	<i>Nucleic acid adsorbed to soil matrix</i>
	<ul style="list-style-type: none"> • Use Buffer OPT or increase volume of Buffer OPT. Reduce volume of Buffer E1 when increasing volume of Buffer OPT • Increase volume of Phenol:Chloroform:Isoamylalcohol. Some soils do not require Phenol:Chloroform:Isoamylalcohol, but in most cases addition of Phenol:Chloroform:Isoamylalcohol is mandatory to gain long, intact RNA.
	<i>Storage of soil sample</i>
	<ul style="list-style-type: none"> • Storage conditions might alter RNA integrity and total amount of nucleic acids. Especially mRNA profiles might change and total yield might reduce during storage at room temperature or depending on humidity.
	<i>Sample amount</i>
	<ul style="list-style-type: none"> • Do not fill the NucleoSpin® Bead Tubes Type A higher than the 1 mL mark as this will result in decreased bead beating efficiency. "Less is more". • Check if the beads are moving vigorously in the tubes during the bead beating.
	<i>Room temperature</i>
	<ul style="list-style-type: none"> • Best performance is achieved at 18–25 °C. Do not store buffers in the fridge or on ice!

Problem	Possible cause and suggestions
Poor downstream performance	<i>Humic acid contamination</i>
	<ul style="list-style-type: none"> • To verify PCR inhibition by humic substances as root cause for poor downstream application results, check if a dilution series (e.g., 1:10, 1:100, 1:1000) of the eluates with water will restore functionality in downstream application. If not, other reasons must be taken into account. • Buffer OPT will release PCR inhibitors from soils. Skip addition or decrease volume. • Reduce bead beating time.
	<i>DNA contamination</i>
Low nucleic acid integrity	<ul style="list-style-type: none"> • Separation of DNA and RNA is not complete. If residual DNA in the RNA fraction or RNA in the DNA fraction is influencing downstream application results, digest RNA and DNA enzymatically. Contact MACHEREY-NAGEL (techbio@mn-net.com) for enzymes and protocols if necessary.
	<i>Degraded nucleic acids</i>
Low nucleic acid integrity	<ul style="list-style-type: none"> • Degraded DNA from dead cells will also elute in the RNA eluate fraction and might be detected as low molecular weight smear. Usually this nucleic acid will not interfere with downstream applications. Digest residual DNA if necessary.
	<i>Ambient temperature</i>
Low nucleic acid integrity	<ul style="list-style-type: none"> • Elution profiles strongly depend on the pH value of the elution buffers. Changes in room- or buffer temperature might change the pH value, resulting in a decreased rRNA yield (temperatures above 25 °C) or increased DNA contamination in the RNA fraction (temperatures below 18 °C). Always keep buffers at room temperature (18–25 °C). The pH value of buffer ERNA should be at pH 7.1 +/- 0.1, the pH value of buffer EDNA at pH 8.0 +/- 0.1. If not, do not adjust buffer pH value but buffer temperature!

6.2 Ordering information

Product	REF	Pack of
NucleoBond® RNA Soil	740140.20	20 preps
DNA Set for NucleoBond® RNA Soil	740141.20	20 preps
NucleoSpin® Soil	740780.10 / .50 / .250	10 / 50 / 250 preps
NucleoSpin® RNA Stool	740130.10 / .50	10 / 50 preps
NucleoSpin® DNA Stool	740472.10 / .50 / .250	10 / 50 / 250 preps
rDNase Set	740963	500 reactions
Liquid RNase A	740397	500 reactions
MN Bead Tube Holder	740469	1 piece
NucleoSpin® Bead Tubes Type A (0.6–0.8 mm ceramic beads)	740786.50	50 pieces

6.3 Product use restriction / warranty

All MACHEREY-NAGEL products are designed for their intended use only. They are not intended to be used for any other purpose. The description of the intended use of the products can be found in the original MACHEREY-NAGEL product leaflets. Before using our products, please observe the instructions for use and the safety instructions from the respective Material Safety Data Sheet of the product.

This MACHEREY-NAGEL product is carrying documentation stating specifications and other technical information. MACHEREY-NAGEL warrants to meet the stated specifications. The provided warranty is limited to the data specifications and descriptions as given in the original MACHEREY-NAGEL literature. No other statements or representations, written or oral, by MACHEREY-NAGEL's employees, agents or representatives, except written statements signed by a duly authorized officer of MACHEREY-NAGEL are authorized. They should not be relied upon by the customer and are not a part of a contract of sale or of this warranty.

Liability for all possible damages that occur in any connection with our products is limited to the utmost minimum as stated in the general business terms and conditions of MACHEREY-NAGEL in their latest edition which can be taken from the company's website. MACHEREY-NAGEL does not assume any further warranty.

Products and their application are subject to change. Therefore, please contact our Technical Service Team for the latest information on MACHEREY-NAGEL products. You may also contact your local distributor for general scientific information. Descriptions in MACHEREY-NAGEL literature are provided for informational purposes only.

Last updated: 08/2022, Rev. 04

Please contact:

MACHEREY-NAGEL GmbH & Co. KG
Tel.: +49 24 21 969-333
support@mn-net.com


Trademarks:

NucleoBond and NucleoSpin are registered trademarks of MACHEREY-NAGEL GmbH & Co KG


Fastprep is a registered trademark of MP Biomedicals, LLP

Vortex-Genie is a registered trademark of Scientific Industries

All used names and denotations can be brands, trademarks, or registered labels of their respective owner – also if they are not special denotation. To mention products and brands is only a kind of information (i.e., it does not offend against trademarks and brands and can not be seen as a kind of recommendation or assessment). Regarding these products or services we can not grant any guarantees regarding selection, efficiency, or operation.

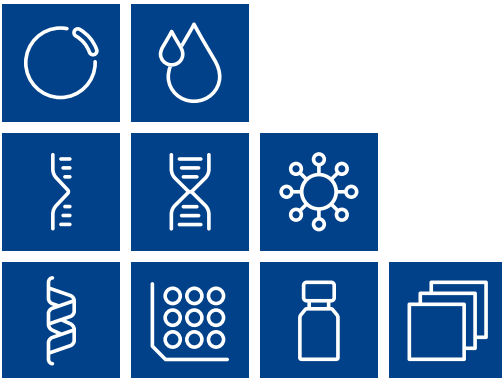

Plasmid DNA
Clean up
RNA
DNA
Viral RNA and DNA
Protein
High throughput
Accessories
Auxiliary tools

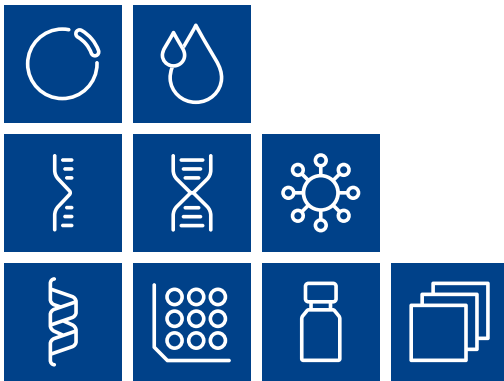

A058816/xxxxx

www.mn-net.com

MACHEREY-NAGEL



 TÜVRheinland CERTIFIED	Management System EN ISO 13485:2016 ISO 9001:2015	
	www.tuv.com ID 0000056401	

MACHEREY-NAGEL GmbH & Co. KG · Valencienner Str. 11 · 52355 Düren · Germany

DE +49 24 21 969-0 info@mn-net.com

CH +41 62 388 55 00 sales-ch@mn-net.com

FR +33 388 68 22 68 sales-fr@mn-net.com

US +1 888 321 62 24 sales-us@mn-net.com